

TABLE 19 - TEMPERATURE SENSORS AND TRANSDUCERS

ITEM	QUANTITY	DESCRIPTION	MODELS	PART NUMBER	FIGURE
1 ^S	1	Sensor, Outside Air Temperature (Cable Included)	QTC2015T-QTC2030T	025-40273-008	Not Shown
			QTC2035T & QTC2040T	025-40273-006	
			QTC2045T	025-40273-003	
2 ^S	2	Sensor, Entering Water Temperature (Cable Included)	QTC2015T-QTC2030T, QTC2045T	025-40273-002	18
			QTC2035T-QTC2040T	025-40273-005	
3 ^S	2	Sensor, Leaving Water Temperature (Cable Included)	QTC2015T-QTC2030T, QTC2045T	025-40273-007	
			QTC2035T-QTC2040T	025-40273-004	
4	-	Compound, Heat Conductive**	All	013-00898-000	
5 ^S	2	Transducer, Suction Pressure (0-400psi)	All	025-41756-002	
6 ^S	2	Transducer, Discharge Pressure (0-650psi)	All	025-41756-003	

^S Recommended Spare Part

* **Note:** Used with items 2 and 3.

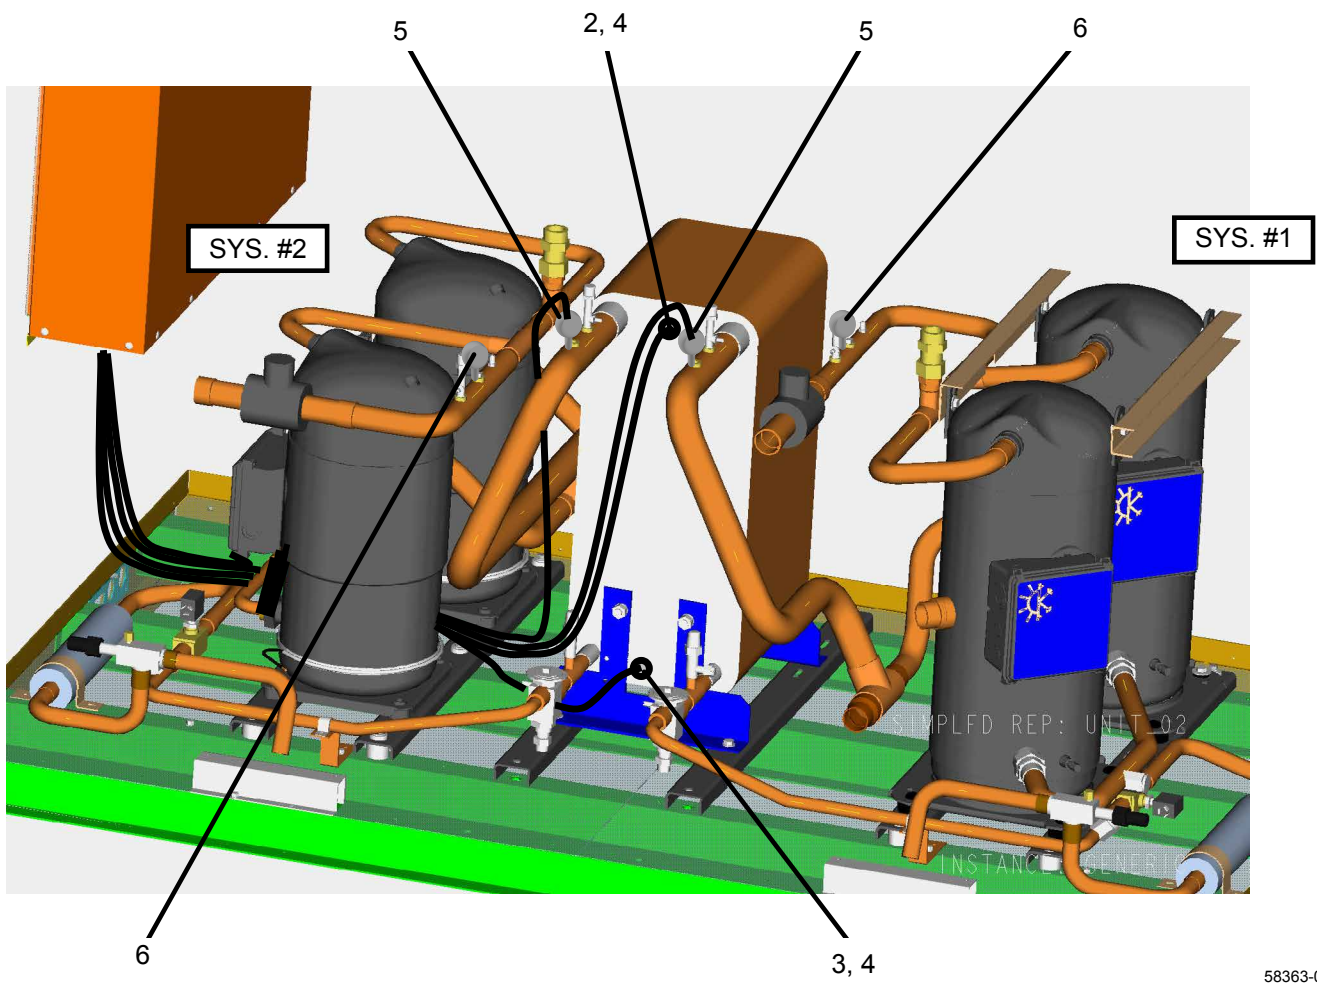


FIGURE 18 - TEMPERATURE SENSORS AND TRANSDUCERS