

**TABLE 57 - SINGLE POINT TERMINAL BLOCK STANDARD OR ULTRA QUIET FANS (PIN 52 = X OR L) (SX)
 (CONT'D)**

ITEM	DESCRIPTION	MODEL	VOLTAGE (PIN 11 & 12)	PART NUMBER	FIGURE
8	Ground Lug, Copper	QTC3125T, QTC3130T	17, 28, 40	025-34089-000	
			46	025-34086-000	
			58	025-34085-000	
		QTC3140T - QTC3170T	17, 28, 46	025-34085-000	
			40, 58	025-34089-000	
8A	Ground Lug, Copper	QTC3125T, QTC3130T	17, 28	025-34086-000	33
9	Distribution Block	QTC3055T, QTC3060T	17, 28	025-32536-000	
			40, 46, 58	025-34089-000	
		QTC3070T - QTC3100T	17, 28	025-32536-000	
			40, 46, 58	025-40848-000	
		QTC3110T - QTC3130T	17, 28, 40	025-32536-000	
			46, 58	025-40848-000	
		QTC3140T - QTC3170T	17, 28, 40, 46	025-32536-000	
			58	025-40848-000	
10	Surge Suppressor	QTC3055T - QTC3170T	ALL	031-3075T8-000	33
11	Tempo Micro Assy	QTC3055T - QTC3170T	ALL	-	*
	Fuse, 600V, Class CC, 10A			025-34430-000	
	Fuse Holder, 1-Pole, 30A, Class CC			025-45048-001	
	Pcb Connector, Female, 4-Position			025-35627-000	
	Terminal, Ground 22 - 10 Ga.			025-39407-000	
	Jumper, Plug-In (2-Position)			025-37678-000	
	PCB Connector, Female, 10-Position			025-29195-000	
	Connector - Housing			025-20788-000	
	Connector, Plug			025-20918-000	
	Split Pin Connector			025-22214-000	
	Socket Connector, Female			025-22215-000	
12	Harness - Micro Elv	QTC3055T - QTC3170T	ALL	-	*
	Mini Mate-N-Lok			025-28385-000	
	Plug Housing			025-18955-000	
	Plug Housing			025-21137-000	
	Push-On Conn/Fem Straight			025-23735-000	
	Connector Contact			025-34058-000	
	4 Circuit Dual Row			025-28386-000	
		025-28959-000			
13	Assy IPU2 And I/O	QTC3055T - QTC3170T	ALL	031-02550-001	*
14	Flash Card, Programmed	QTC3055T - QTC3170T	ALL	031-02755-004	*
15	Carling Switch	QTC3055T - QTC3170T	ALL	024-25517-000	*
16	Keypad, Non-Embossed, English	QTC3055T - QTC3170T	ALL	024-36082-007	*
17	Display To IPU I/O Cable	QTC3055T - QTC3170T	ALL	031-02108-000	*
18	2X20 Display	QTC3055T - QTC3170T	ALL	031-02749-000	*

NOTE:

* Items are NOT represented.

** Make a visual inspection of the fuses and contactors in order to select the correct replacement part, refer to Table 65 on page 113.