

**TABLE 65 - POWER PANEL FUSES AND CONTACTORS**

DESCRIPTION	PART NUMBER
FUSE, 600V, CLASS CC, 10A	025-37618-000 025-34139-000
FUSE, 600V, CLASS CC, 12A	025-38396-000 025-34140-000
FUSE, 600V, CLASS CC, 15A	025-34141-000
FUSE, 600V, CLASS CC, 17-1/2A	025-34142-000
FUSE, 600V, CLASS CC, 20A	025-34142-000
FUSE, 600V, CLASS CC, 30A	025-39683-000
FUSE, 600V, CLASS J, 35A	025-36172-000 025-42822-253
FUSE, 600V, CLASS J, 45A	025-39349-000 025-40537-011
FUSE, 600V, CLASS J, 50A	025-36175-000 025-40537-012
FUSE, 600V, CLASS J, 60A	025-36176-000 025-40537-001
FUSE, 600V, CLASS J, 90A	025-36179-000 025-38344-000
FUSE, 600V, CLASS J, 100A	025-36180-000 025-40537-002
CONTACTOR, 3-POLE, 9A, 600V	024-34302-000
CONTACTOR, 3-POLE, 12A, 600V	024-34300-000
CONTACTOR, 3-POLE, 18A, 600V	024-34304-000
CONTACTOR, 32A, 110VAC COIL	024-34306-000
CONTACTOR, 3-POLE, 40A, 600V	024-37039-000
CONTACTOR, 3-POLE, 50A, 600V	024-37040-000
CONTACTOR, 3-POLE, 65A, 600V	024-37041-000
CONTACTOR, 3-POLE, 80A, 600V	024-34310-000
CONTACTOR, 3-POLE, 115A, 600V 110V COIL	029-23472-000 024-37042-000
CONTACTOR, 3-POLE, 150A, 600V	024-34294-000

**TABLE 66 - EEV PANEL KIT**

MODELS	PIN 9 =	PIN 32 = E
		PIN 14 = F
		PIN 24 = L
		PART NUMBER
QTC3055T, QTC3060T, QTC3080T, QTC3090T, QTC3100T, QTC3110T	H	392-06140-003
QTC3085T, QTC3095T, QTC3110T	S	
QTC3070T	S	392-06140-001
QTC3075T	S	392-06140-002
QTC3125T, QTC3140T	S	392-06140-004
QTC3130T, QTC3150T	H	
QTC3160T	S	392-06140-005
QTC3170T	H	