

**TABLE 4 - VSD / CONTROL PANEL (PIN 12 & 13 = 42) (CONT'D)**

ITEM	MODELS	PIN 17 =	FANS	DESCRIPTION	PART NUMBER	SAP NUMBER	FIGURE
37	All Models	All	All	Gasket Coil Drive	028-15251-000	742109	2,3
41	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Trig to Gate	571-04178-251	427924	1,2
42	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Gate Driver	571-04178-281	427925	2
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	All	All	Control, VSD Logic Board	031-02507-003	947328	
43	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Gate Driver	571-04178-282	427926	2
58	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	SD Card with Software, Control Bd	031-03476-010	1201877	4
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	All	All		031-03476-013	1201878	
		D, S, M, T, P, O		Blank SD Card	031-03466-000	1152945	
59	All Models	All	All	EPROM, VSD Logic Board	031-03422-010	947512	4
61	All Models	All	All	Switch Keypad	024-34930-000	247624	4
62	All Models	All	All	Display LCD	031-02508-000	743925	4
63	All Models	All	All	Switch, DPST, Two Position	024-34951-000	736122	4
68	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P)	S, B, N	All	Cable Ribbon Display	571-04178-261	807007	4,5
	290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H)	S, B, N	All		571-04178-268	807013	
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	All	All		571-04178-266	807011	