

TABLE 7 - VSD / CONTROL PANEL (PIN 12 & 13 = 58) (CONT'D)

ITEM	MODELS	PIN 17 =	FANS	DESCRIPTION	PART NUMBER	SAP NUMBER	FIGURE
25	All Models	All	All	Thermal Pad, Resistor	028-15299-000	742121	1
28	All Models	All	All	Control Board	331-03478-101	5003221	4
31	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Control Tme Bus Isolator	031-01624-000	743779	1
32	All Models	All	All	Gasket Field Power	028-15246-000	742105	1
33	All Models	All	All	Gasket Customer Conn	028-15247-000	742106	1
34	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Gasket Circuit Breaker	028-15824-000	651576	4
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	D, S, M, T, P, O	All		028-15248-000	742107	
35	All Models	All	All	Gasket Auto Trans	028-15249-000	742108	1
37	All Models	All	All	Gasket Coil Drive	028-15251-000	742109	2,3
41	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Trig To Gate	571-04178-251	427924	1,2
42	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Gate Driver	571-04178-281	427925	2
42a	370(P, S, H)	S, B, N	All	Control, VSDLogic Board	031-02507-003	947328	*
43	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	Cable Gate Driver	571-04178-282	427926	2
58	150S, 165H, 175P, 185(S, H, P), 175C, 210(S, H, P), 230S, 240(H, P), 260S, 270(C, S, H, P), 290H, 300(S, H), 310P, 315P, 320S, 330S, 340(S, H),	S, B, N	All	SD Card with Software, Control Board	031-03476-010	1201877	4
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	B, D, N, S, P, O	LS/UQ		031-03476-013	1201878	
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	M, T	LS/UQ		031-03476-010	1201877	
	370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	All	HA/HS	031-03476-013	1201878		
370(P, S, H), 400P, 405S, 410(H, P), 450S - 500S	D, A, M, T, P, O	Blank SD Card		031-03466-000	1152945		
59	All Models	All	All	EPROM, Logic Board	031-03422-010	947512	4
61	All Models	All	All	Switch Keypad	024-34930-000	247624	4
62	All Models	All	All	Display LCD	031-02508-000	743925	4
63	All Models	All	All	Switch, Two Position	024-34951-000	736122	4