

HERMETIC MOTOR CURRENT TRANSFORMER ASSEMBLY [Electro Mechanical Started Units]

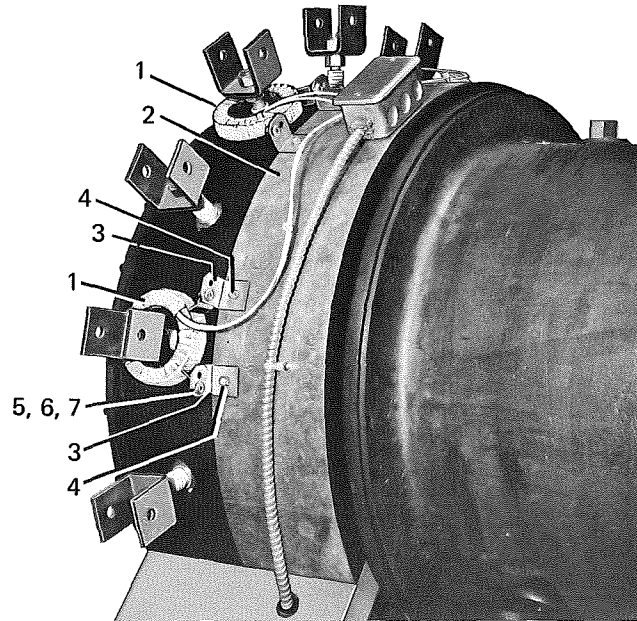


FIG. 18 — CURRENT TRANSFORMER ARRANGEMENT — LOW VOLTAGE

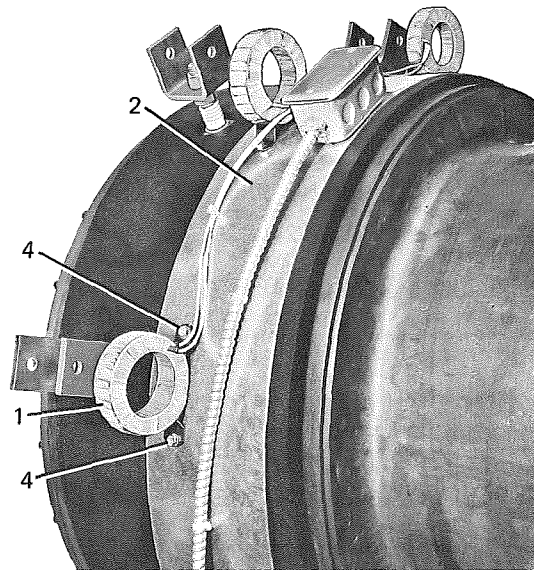


FIG. 19 — CURRENT TRANSFORMER ARRANGEMENT — HIGH VOLTAGE

Item	Description	364-45881 -002 L.V. 200:1		364-45881 -002 L.V. 350:1		364-45881 -002 L.V. 700:1		364-45881 -002 L.V. 1400:1		364-45881 -002 H.V. 200:1		364-45881 -002 H.V. 350:1	
		Qty.		Qty.		Qty.		Qty.		Qty.		Qty.	
1	Current Transformer	3	025-21173 -001	3	025-21173 -002	3	025-21173 -003	3	025-21173 -004	3	025-21173 -001	3	025-21173 -002
2	Bracket	1	064-45867	1	064-45867	1	064-45867	1	064-45867	1	064-45868	1	064-45868
3	Bracket, Angle	6	064-45882	6	064-45882	6	064-45882	6	064-45882	—	—	—	—
4	Scr Self Tap 1/4	6	021-13774	6	021-13774	6	021-13774	6	021-13774	6	021-13774	6	021-13774
5	Scr Cap 1/4 x 1/2	6	021-01366	6	021-01366	6	021-01366	6	021-01366	—	—	—	—
6	Nut	6	021-00450	6	021-00450	6	021-00450	6	021-00450	—	—	—	—
7	Lockwasher	6	021-05289	6	021-05289	6	021-05289	6	021-05289	—	—	—	—