AUXILIARY OIL PUMPS

DESCRIPTION	PART NO.	REPLACEMENT SEAL ASSEMBLY
Counter-Clockwise type	026-17734	364-34971T*
Clockwise Type		
Bare Pump	026-17733	
Pump Assembly (Pump & Motor)		364-34971T*
115/230V-60 Cycle	026-17735	
230/460V-60 Cycle	026-17737	
110/220V-50 Cycle	026-17739	
220/280V-50 Cycle	026-17741	

*This replacement seal is interchangeable with seal P/N 026-10904, used on old style oil pumps (P/N's 026-09306 & 026-13605.

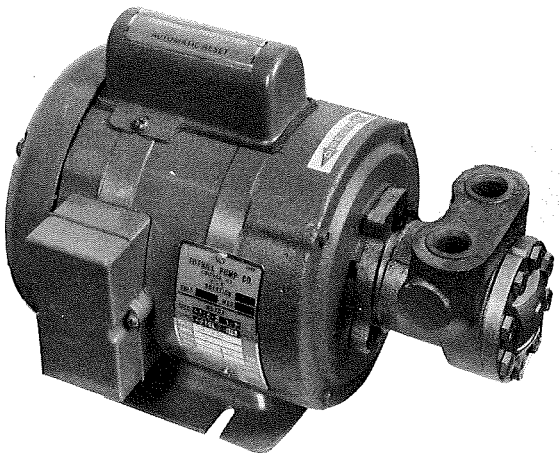

FIG. 41 — TUTHILL STYLE AUX. OIL PUMP

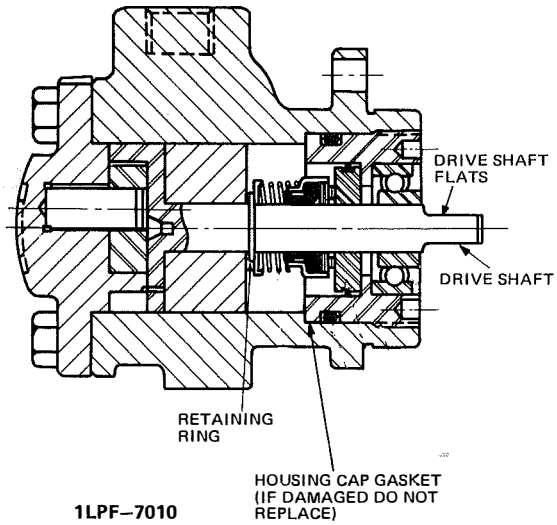

FIG. 42 — REPLACEMENT SEAL ASSEMBLY

TABLE 5— OIL HEATERS

MODEL	DESCRIPTION	PART NO.	QUAN.
LTD 53	600 W –	025–16340	1
LTD 59	450 W –	025–09432	1
LTD 67	600 W –	025–13941	2
LTD 76			
LTD 85			
LTD 95			
LTD 108			
LTD 120			
LTD 126			

TABLE 6— OIL HEATER THERMOSTAT

MODEL	PART NO.	QUAN.
LTD 53	025-16593	1
LTD 59		
LTD 67		
LTD 76		
LTD 85		
LTD 95		
LTD 108		
LTD 120		
LTD 126		

TABLE 7— OIL LEVEL FLOAT SWITCHES

MODEL	PART NO.	QUAN.
LTD 53	025–16523	1
LTD 59		
LTD 67		
LTD 76		
LTD 85		
LTD 95		
LTD 108		
LTD 120		
LTD 126		

TABLE 8— HIGH OIL TEMP. CONTROL (HOT)

MODEL	PART NO.	QUAN.
LTD 53	025–15381–003	1
LTD 59		
LTD 67		
LTD 76		
LTD 85		
LTD 95		
LTD 108		
LTD 120		
LTD 126		