


## ELECTRONIC CONTROL CENTER

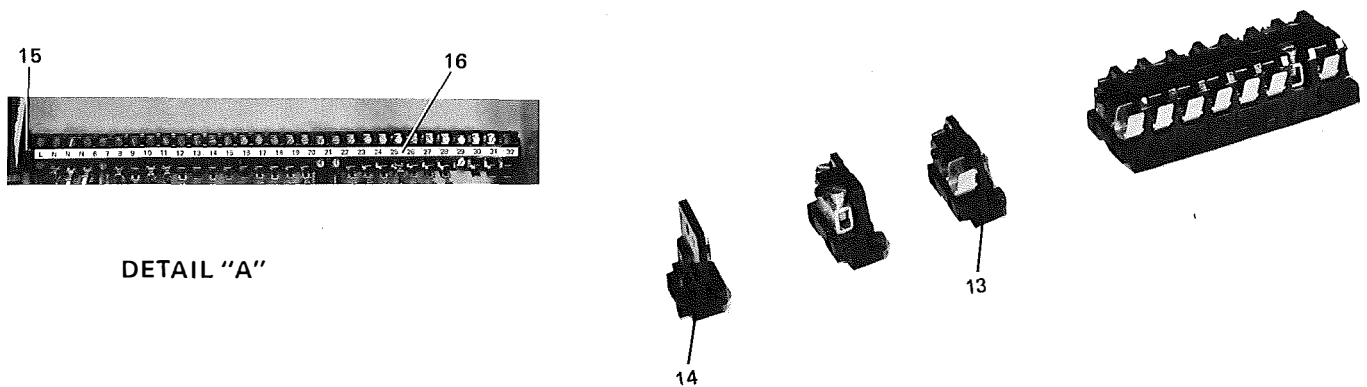

DETAIL "A"

FIG. 2—TERMINAL STRIP PARTS

Item	Part Description	Fig.	Quan.	Part No.	
				R-12 366-79993-002	R-500 366-79993-003
1	Control Module	1	1	025-16883	025-16883
2	Control, Oil Pressure (OP)	1	1	025-14386	025-14386
3	Control, High Pressure	1	1	025-17289	025-17289
4	Control, Low Pressure (LP)	1	1	225-15929-002	225-15929-004
5	Relay, Control, RBM91 (6R, 7R, 8R, 9R)	1	4	024-17075	024-17075
6	Relay, Control, RBM91 (14R)	1	1	024-11655	024-11655
7	Relay, Control, RBM92 (11R)	1	1	024-11784	024-11784
8	Relay, Control, RBM91 (4R, 17R)	1	2	024-14519	024-14519
9	Relay, Control, RBM91 (5R)	1	1	024-13304	024-13304
10	Relay, Control, RBM92 (3R), (10R)	1	2	024-17093	024-17093
11	Timer (1TR) (30 Min.)	1	1	025-17172	025-17172
12	Timer (2TR) (4 Min.)	1	1	025-17626	025-17626
13	Block, Terminal	2	31	025-15865	025-15865
14	End, Terminal Block	2	1	025-13981	025-13981
15	Screw, Tap, Type F. Rd. Hd. 8 x 3/8	2	44	021-09779	021-09779
16	Strip, Marker	2	1	025-20517	025-20517
17	Switch (Service)	1	1	025-13760	025-13760
18	Gauge, Pressure (Oil Pressure)	1	1	026-14572-001	026-14572-001
19	Gauge, Pressure (Low Pressure)	1	1	026-14572-003	026-14572-003
20	Center Panel	1,3	1	366-80729	366-80729
21	Light, Indicator (Red) (4L, 5L, 6L, 7L)	3	4	025-13551	025-13551
22	Light, Indicator (Amber) (2L, 3L, 8L, 9L, 12L)	3	5	025-14025	025-14025
23	Light, Indicator (White) (1L, 10L, 11L)	3	3	025-15708	025-15708
24	Fuseholder	3	4	025-13991	025-13991
25	Fuse, 1/2 AMP, 250V, CTG. (4 FU)	3	1	025-14383	025-14383
26	Fuse, 15 AMP, 250V, CTG. (1 FU-3 FU)	3	3	025-14384	025-14384
27	Switch, Pushbutton (Black)	3	1	024-13761	024-13761
28	Switch, Pushbutton (Red)	3	1	024-16933	024-16933
29	Switch, Rocker	3	1	024-13760	024-13760
30	Switch, Rocker	3	1	024-16590	025-16590
31	Screw, Slot Hd. No. 2	3	1	021-11631	021-11631
32	Washer, Retaining, No. 2	3	1	021-11632	021-11632
33	Fastener, Lock and Key	1	1	021-13025	021-13025
34	Door, Control Panel	1	1	367-82337	367-82337
35	Panel, Gauge	1	1	367-82339	367-82339
36	Transformer (1T)	1	1	025-18690	025-18690
37	Gauge Pressure (High Pressure)	1	1	025-14572-005	025-14572-005
38	Barrier Relay	1	1	066-79132	066-79132
39	Barrier Center Panel	1	1	066-79131	066-79131
40	Gaurd Harness	1	1	066-79324	066-79324
41	Clip	2	2	021-12047	021-12047