


## FAN COMPONENTS

**SERVICE NOTE:**

Fan Hub to Shaft Joint should be sealed with protective coating - use RUST VETO 344 - a solvent type, rust preventative coating.

71386-000

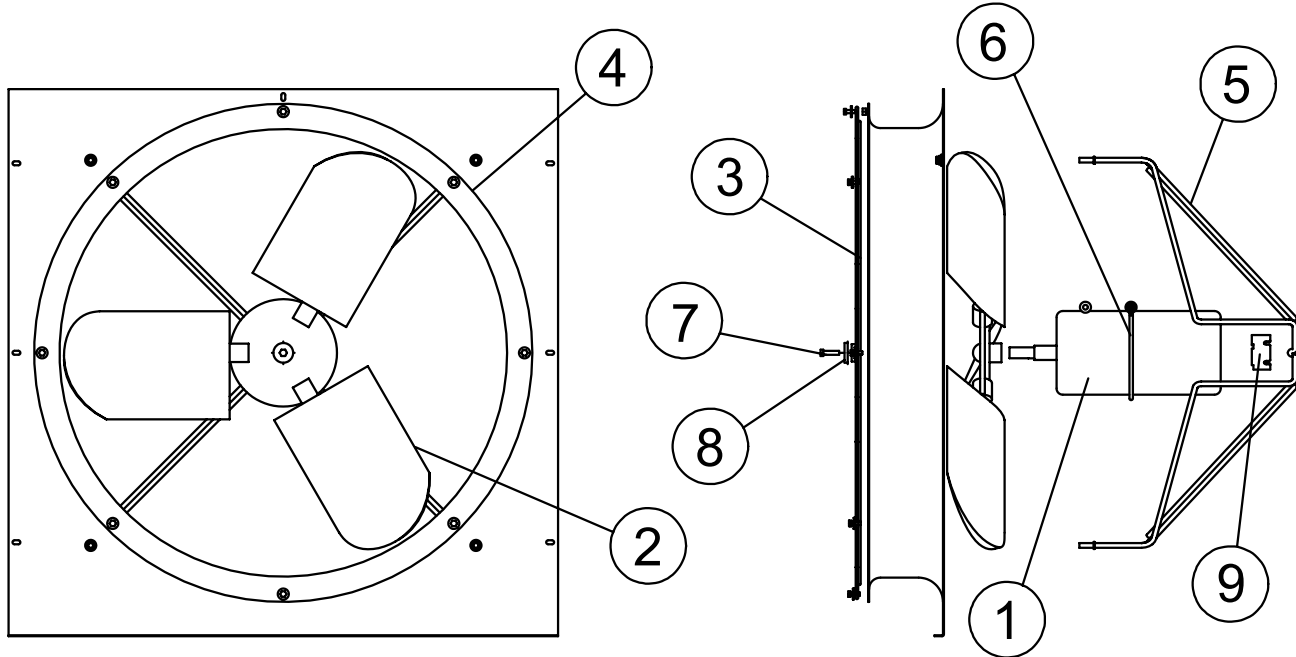

**SERVICE NOTE:** Pin Location 52 in Model Number will be "X" for Standard Fan, or "L" for Low Noise Fan. See page 4.

**FIGURE 4 - FAN COMPONENTS**

**TABLE 3 - FAN COMPONENTS**

ITEM NUMBER	DESCRIPTION	VOLTAGE CODE	FAN TYPE	
			STANDARD 7/8", 1160 RPM	LOW NOISE 7/8", 850 RPM
1 <sup>s</sup>	Motor, Fan 2 HP (QCC3080C-QCC3160C)	-17	024-36873-103	024-34980-102
		-28	024-36873-106	024-34980-102
		-40	024-36873-104	024-34980-105
		-46	024-36873-107	024-34980-101
		-58	024-36873-102	024-34980-104
2 <sup>s</sup>	Blade	All	026-41594-000	026-41942-000
3	Guard	All	026-35605-000	
4	Orifice	All	026-45002-000	
5	Support	All	026-41937-000	026-45533-000
6	Support, Ring	All	026-36367-000	
7	Screw, Cap (M8x125)	All	021-18494-000	
8	Spacer	All	075-40484-000	
9	Hub, Square	All	026-41939-002	026-41939-005

<sup>s</sup> = Recommended Spare Parts